


# LINEAR STRIP SINGLE COLOUR 600mm

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING TO INSTALL THIS PRODUCT  
NO RESPONSIBILITY IS TAKEN FOR DAMAGE CAUSED BY INCORRECT HANDLING, WIRING OR INSTALLATION

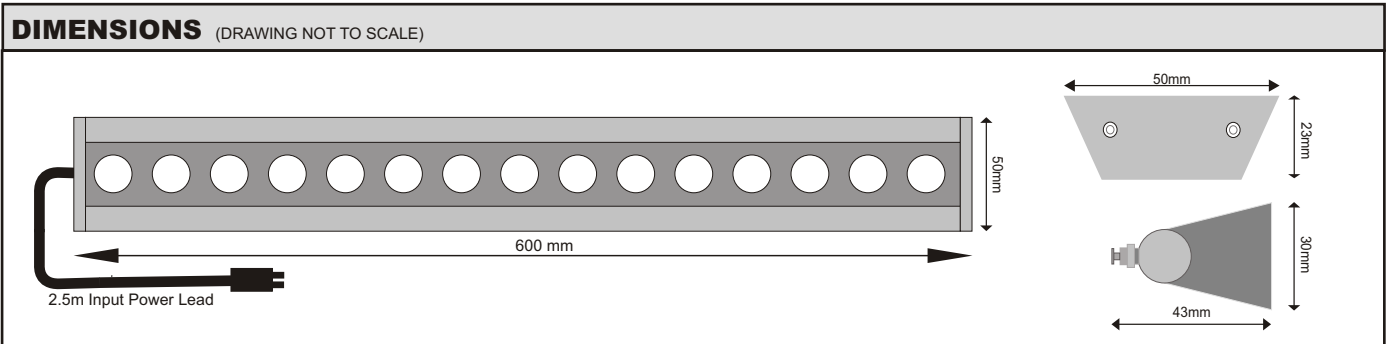

## MAXIMUM POWER REQUIREMENTS

350mA CONSTANT CURRENT SUPPLY


Forward Voltage (per channel):  
Typical 18.9V  
Maximum 23.94V

**\*\*EXCEEDING THESE VALUES WILL DAMAGE THE LIGHT BEYOND REPAIR AND VOIDS ANY WARRANTY\*\***

## FITTING INSTRUCTIONS

- Look at the installation (decide where the profile and transformer are to be placed and how they will be mounted).
- Remove the main part of the mounting bracket by undoing the hex bolt.
- Mark the centre position of the mounting brackets.
- Drill and plug holes for the mounting brackets.
- Attach the main part of the mounting bracket in the pre drilled holes using appropriate fixings.
- Slide the rest of the mounting bracket into the slot on the profile to the required position and secure with the lock nut.
- Fix the light to the mounting brackets using the hex bolts supplied and adjust to the angle required before tightening securely.
- Feed the input lead to the transformer position.
- Mount the driver using suitable screws through the mounting holes.
- Plug the profile into the driver (see diagram below).
- Connect mains power.
- The profile is now ready for use.

## CONNECTION DETAILS

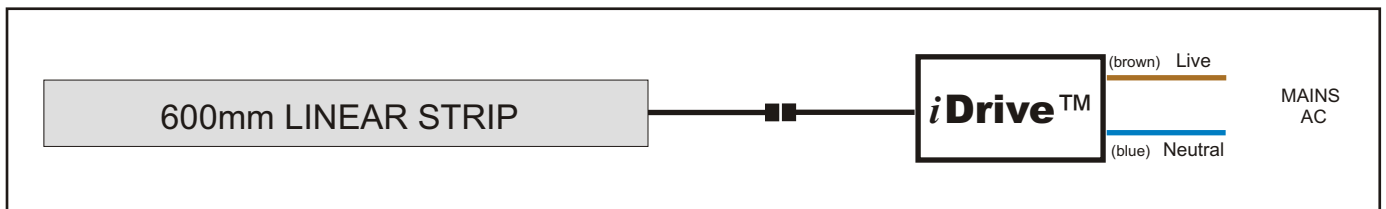

## IMPORTANT

DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT ADVICE FROM A FULLY QUALIFIED ELECTRICAL ENGINEER. FAILURE TO DO SO MAY CAUSE PERSONAL HARM OR DAMAGE TO THE PRODUCT.

IT IS IMPORTANT THAT THESE GUIDELINES ARE FOLLOWED AT ALL TIMES DURING INSTALLATION. THIS INFORMATION IS FOR YOUR SAFETY AND TO ENSURE THAT THE PRODUCT IS INSTALLED CORRECTLY.

THE PRODUCT MUST BE WIRED AS PER THIS DIAGRAM. IF THE PRODUCT IS WIRED INCORRECTLY IT WILL NOT FUNCTION AND CAUSE SEVERE INTERNAL DAMAGE TO THE DEVICE.